SilverLink 4 ______ SilverLink 4

Software Installation (Windows 98 and ME)

- 1. Insert the SilverLink 4 installation CD in the CDROM drive
- 2. The USB Driver installation program will start automatically
- 3. If autorun is not enabled on your computer, go to step 5
- 4. Do NOT install the USB drivers.
- 5. Connect the SilverLink 4 box to a free USB port of your computer using the USB cable provided
- 6. Windows will indicate "New hardware found"
- 7. Preferably let Windows search for the drivers
- 8. In case Windows doesn't find the drivers, indicate Windows that the drivers can be found on the CDROM
- 9. If Windows informs you that the drivers are not compatible, click on "Continue anyway"
- 10. The USB Serial Converter is now installed
- 11. Windows will indicate again "New hardware found"
- 12. Preferably let Windows search for the drivers
- 13. In case Windows doesn't find the drivers, indicate Windows that the drivers can be found on the CDROM
- 14. If Windows informs you that the drivers are not compatible, click on "Continue anyway"
- 15. The USB Serial port is now installed
- 16. The installation is completed

Quickstart installation instructions

Parts list SilverLink 4

- 1. SilverLink 4 box
- 2. USB Cable
- 3. Power Supply + power lead
- 4. CDROM USB drivers
- 5. This leaflet

Software Installation (not for Windows 98 or ME)

NOTE: INSTALL THE SOFTWARE BEFORE CONNECTING THE SILVERLINK 4 TO THE COMPUTER

- 1. Insert the SilverLink 4 installation CD in the CDROM drive
- 2. The USB Driver installation program will start automatically
- 3. If autorun is not enabled on your computer, look for the CDRom and double click on Setup.exe in the root of the CD
- 4. Follow the on screen instructions; the InstallShield installation wizard will guide you through the process
- 5. Before clicking **Finish**, check that the installation of the USB drivers is completed. Move the installation dialog so you can see wether another program is covered by the installation dialog.